

## Changing the memory card battery

*Comment: For a cleaner environment, please dispose of used batteries in the containers provided for this purpose.*

**Important!** Carefully follow the procedure given below to ensure that the data stored on the card is preserved.

### 1 Safe removal

- Switch on the machine and place the card into the connector

### 2 Remove the worn-out battery

- Push the locking peg on the side of the card in the opposite direction to the LOCK arrow (fig1).
- Pull the case open (fig2), holding down the battery at the same time so it does not fall out (the battery is removed from underneath the case).

### 3 Put in the new battery

- Position the battery in the case so that the + side is to the outside (fig3).
- Push the case back into the card, holding down the battery so it does not fall out (fig4).
- Push the locking peg in the direction indicated by the lock arrow (fig5).

*Comment: Write the expiry date for the new battery onto the white strip found on top of the card.*

